


# **Spare parts list Rammer**

|                          | Valid from serial number |
|--------------------------|--------------------------|
| LT 6005 230 mm, (9 in.)  | BGF000001                |
| LT 6005 280 mm, (11 in.) | BGF000001                |

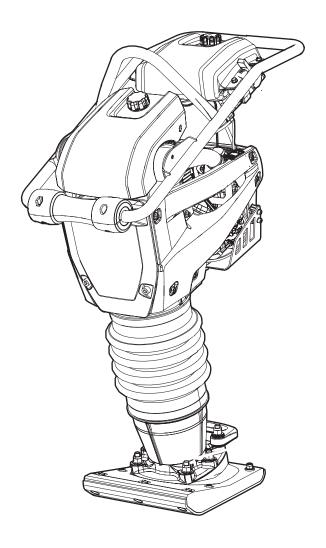

Atlas Copco

LT 6005 Spare parts list

### **General information**

This spare parts list applies to the following:

| Part number  | Description  |
|--------------|--|
| 3382 0003 53 | Rammer LT 6005 230 mm, (9 in.). Standard                   |
| 3382 0002 61 | Rammer LT 6005 230 mm, (9 in.). With air filter indicator  |
| 3382 0002 24 | Rammer LT 6005 280 mm, (11 in.). Standard                  |
| 3382 0003 59 | Rammer LT 6005 280 mm, (11 in.). With air filter indicator |

Use only authorized parts. Any damage or malfunction caused by the use of unauthorized parts is not covered by Warranty or Product Liability. Any unauthorized use or copying of the contents or any part thereof is prohibited. This applies in particular to trademarks, model denominations, part numbers, and drawings.

#### Instructions for use

This spare parts list contains no safety regulations and is merely intended to assist in the ordering of spare parts.

For information about operating, servicing, or repairing, the relevant Safety and operating instructions must be consulted at all costs.


Please observe the safety instructions listed in the relevant Safety and operating instructions!

#### Contents

| Spare parts list                       |   |
|--|---|
| Handle and covers                      |   |
| Throttle control and fuel system       | 7 |
| Air filter and engine installation     | 2 |
| Transmisson                            | ļ |
| Spring unit 16                         |   |
| Foot 230 mm (9 in.)                    | 3 |
| Foot, 280 mm, 11 in                    |   |
| Label                                  | 2 |
| Kits                                   |   |
| One year service kit                   |   |
| Shock absorber repair kit              | 3 |
| Transmission repair kit                | 3 |
| Spring unit repair kit                 | ) |
| Foot 230 mm, 9 in. repair kit          | 2 |
| Foot 280 mm, 11 in. repair kit         | ļ |
| Air filter indictor and hour meter kit |   |
| Trolley                                |   |


Spare parts list LT6005

### Spare parts list Handle and covers

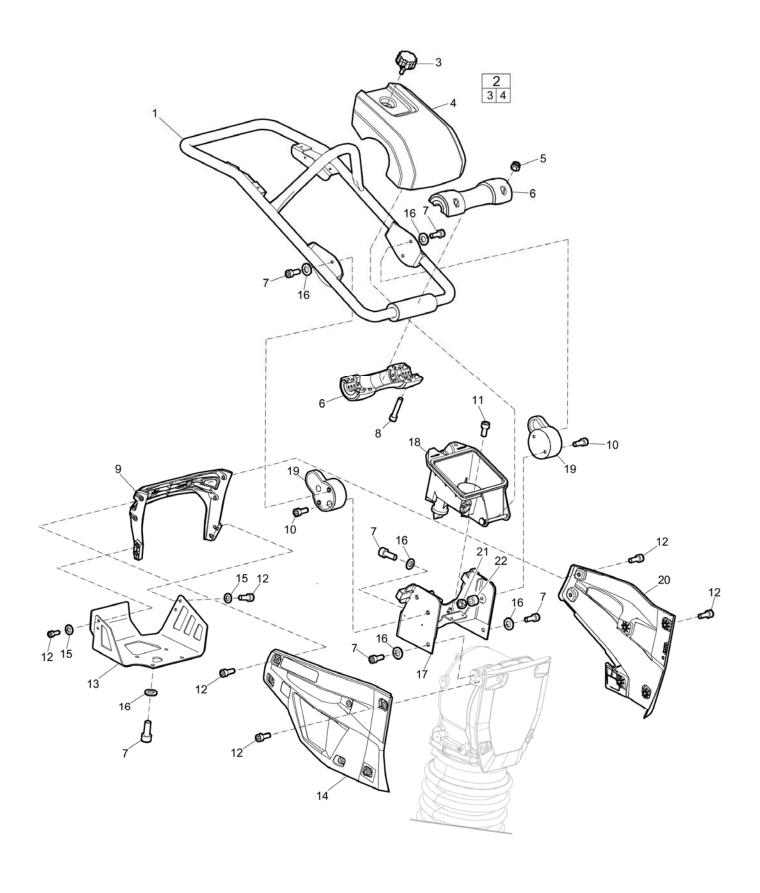


| Item | Part Number | Name                                | Qty | L |
|------|-------------|-------------------------------------|-----|---|
| 1    | 3382011336  | Handle                              | 1   |   |
| 2    | 3382100310  | Hood, complete                      | 1   |   |
| .3   | 9234000948  | Hood knob                           | 1   |   |
| .4   | -           | Hood                                | 1   |   |
| 5    | 0291112815  | Lock nut, M6                        | 4   |   |
| 6    | 4700384496  | Roller                              | 2   |   |
| 7    | 0211132303  | Screw, M8 x 20 mm                   | 12  |   |
| 8    | 0211125003  | Screw, M6 x 30 mm 8.8               | 4   |   |
| 9    | 3382011381  | Rear cover                          | 1   |   |
| 10   | 0211132503  | Screw, M8 x 25 mm                   | 4   |   |
| 11   | 0211124903  | Screw, M6 x 25 mm                   | 4   |   |
| 12   | 0211124603  | Screw, M6 x 16 mm                   | 16  |   |
| 13   | 3382011476  | Engine cover                        | 1   |   |
| 14   | 3382011395  | Right side cover                    | 1   |   |
| 15   | 0301232100  | Washer, 6.4 x 12 x 1.6 mm           | 4   |   |
| 16   | 0301233500  | Washer, 8.4 x 16 x 1.6 mm HB200 FZB | 12  |   |
| 17   | 3382012016  | Handle bracket                      | 1   |   |
| 18   | -           | Air filter housing                  | 1   | A |
| 19   | 3382011297  | Shock absober                       | 2   |   |
| 20   | 3382011401  | Left side cover                     | 1   |   |
| 21   | 0266211000  | Nut, M8                             | 4   |   |
| 22   | 3382012906  | Spacer                              | 4   |   |

### Spare parts list Throttle control and fuel system

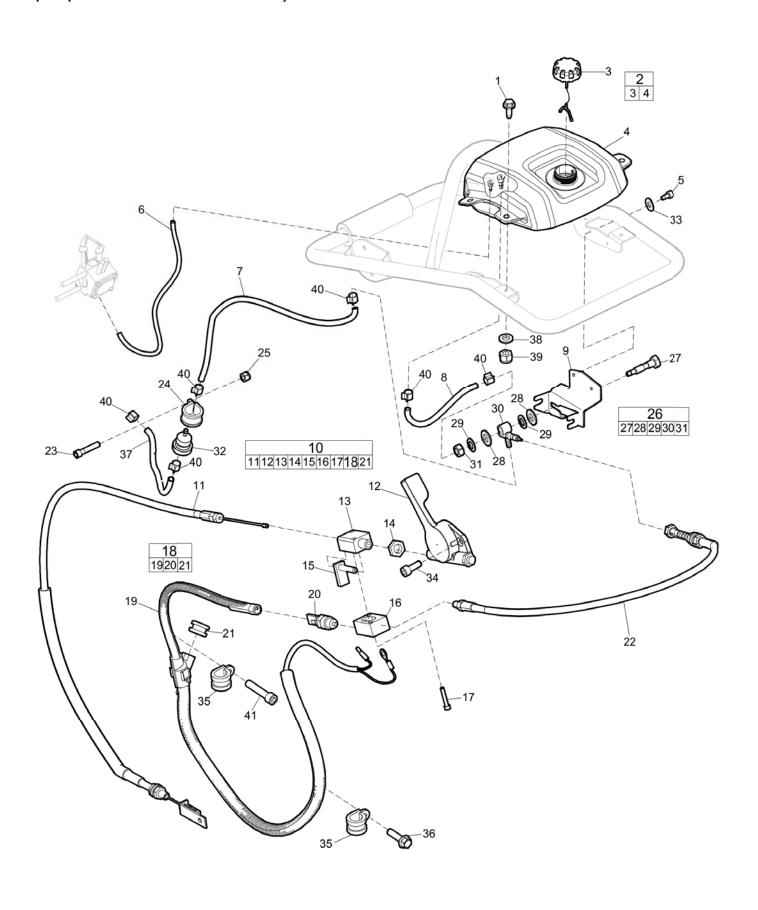


| Item | Part Number | Name                                | Qty | L |
|------|-------------|-------------------------------------|-----|---|
| 1    | 0147300008  | Screw, M6 x 20 mm                   | 4   |   |
| 2    | 3382100311  | Fuel tank, complete                 | 1   |   |
| .3   | -           | Fuel tank                           | 1   |   |
| .4   | 3382011626  | Fuel cap                            | 1   |   |
| 5    | 0211120403  | Screw, M5 x 10 mm 8.8               | 2   |   |
| 6    | 0075000208  | Fuel hose                           | 1   |   |
| 7    | 0075000209  | Fuel hose                           | 1   |   |
| 8    | 0075000209  | Fuel hose                           | 1   |   |
| 9    | 3382012411  | Bracket                             | 1   |   |
| 10   | 3382100321  | Throttle control, complete          | 1   |   |
| .11  | 3382011608  | Throttle wire                       | 1   |   |
| .12  | 3382100320  | Handle                              | 1   |   |
| .13  | 3382011600  | Switch part, upper                  | 1   |   |
| .14  | 3382011596  | Nut                                 | 1   |   |
| .15  | 3382011603  | Switch                              | 1   |   |
| .16  | 3382011598  | Switch part, lower                  | 2   |   |
| .17  | -           | Screw                               | 2   |   |
| .18  | 3382100312  | Cable harness, complete             | 1   |   |
| 19   | -           | Cable harness                       | 1   |   |
| 20   | 3382011601  | Engine switch                       | 1   |   |
| 21   | 3382012916  | End cover                           | 1   |   |
| .22  | 3382012424  | Fuel tap ON/OFF wire                | 1   |   |
| .23  | -           | Screw                               | 1   |   |
| 24   | 0346100029  | Pipe clamp                          | 1   |   |
| 25   | -           | Nut                                 | 1   |   |
| 26   | 3382100313  | Fuel tap, complete                  | 1   |   |
| 27   | -           | Fuel tap screw                      | 1   |   |
| 28   | 0301233500  | Washer, 8.4 x 16 x 1.6 mm HB200 FZB | 2   |   |
| 29   | 0661100054  | Sealing washer                      | 2   |   |
| 30   | -           | Fuel tap                            | 1   |   |
| 31   | 0266211000  | Nut, M8                             | 1   |   |
| 32   | 3382012761  | Fuel filter                         | 1   |   |
| 33   | 0301231800  | Washer, 5.3 x 10 x 1 mm             | 2   |   |
| 34   | 0216110051  | Screw, M5 x 12 mm                   | 2   |   |
| 35   | 0346100205  | Pipe clamp                          | 2   |   |
| 36   | 0147300008  | Screw, M6 x 20 mm                   | 1   |   |
| 37   | 0075000209  | Fuel hose                           | 1   |   |
| 38   | 0301232100  | Washer, 6.4 x 12 x 1.6 mm           | 4   |   |

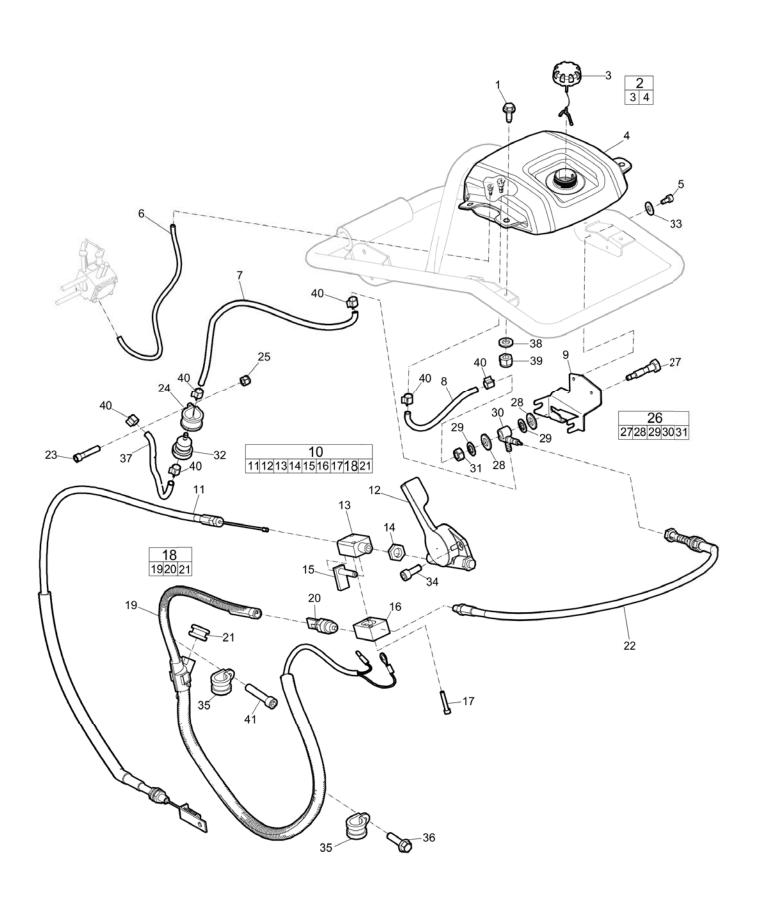

| Item | Part Number | Name                  | Qty | L |
|------|-------------|-----------------------|-----|---|
| 39   | 0291112815  | Lock nut, M6          | 4   |   |
| 40   | 0347010210  | Hose clamp            | 6   |   |
| 41   | 0211125003  | Screw, M6 x 30 mm 8.8 | 1   |   |


Spare parts list Spare parts list LT6005

### Spare parts list Air filter and engine installation

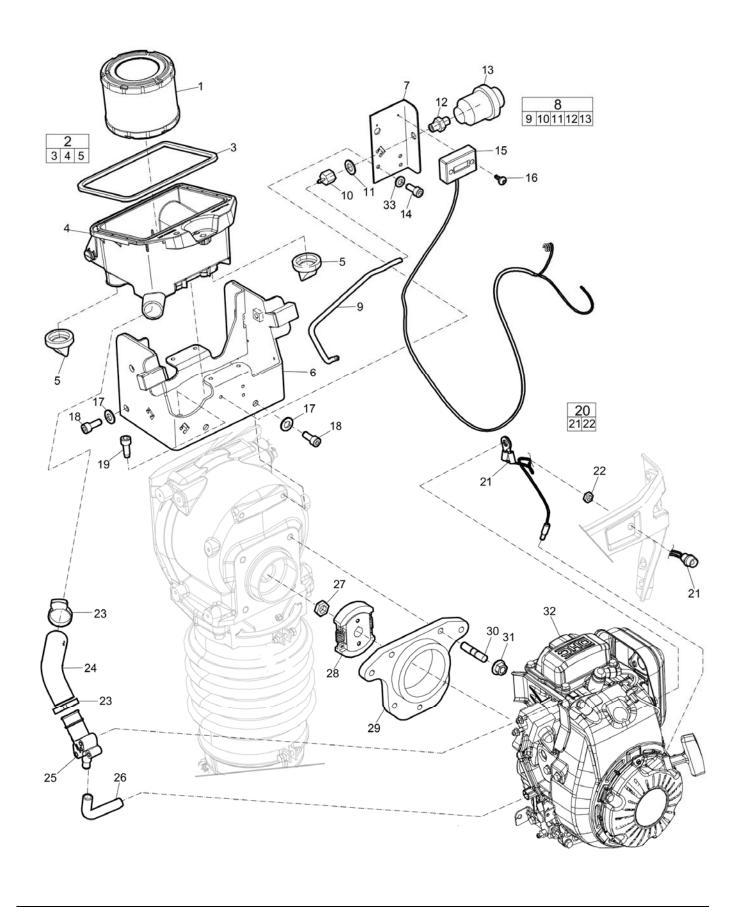


| Item | Part Number | Name                                | Qty | L |
|------|-------------|-------------------------------------|-----|---|
| 1    | 3382011502  | Air filter                          | 1   |   |
| 2    | 3382011461  | Air filter housing, complete        | 1   |   |
| .3   | 3382012499  | Gasket                              | 1   |   |
| .4   | -           | Air filter housing                  | 1   |   |
| .5   | 3382011563  | Evacuator valve                     | 2   |   |
| 6    | 3382012016  | Handle bracket                      | 1   |   |
| 7    | 3382011499  | Holder                              | 1   |   |
| 8    | 3382012431  | Air filter indicator, complete      | 1   |   |
| .9   | 3382011720  | Hose                                | 1   |   |
| .10  | 3382011719  | Connection                          | 1   |   |
| .11  | 3382011718  | Washer                              | 1   |   |
| .12  | 3382011717  | Fitting                             | 1   |   |
| .13  | 3382011721  | Air filter indicator                | 1   |   |
| 14   | 0211124503  | Screw, M6 x 14 mm                   | 3   |   |
| 15   | 3382011564  | Hour meter                          | 1   |   |
| 16   | 0226334329  | Screw, RXK PHIL ST 2.9 x 6.5 mm     | 2   |   |
| 17   | 0301233500  | Washer, 8.4 x 16 x 1.6 mm HB200 FZB | 4   |   |
| 18   | 0211132303  | Screw, M8 x 20 mm                   | 4   |   |
| 19   | 0211124903  | Screw, M6 x 25 mm                   | 4   |   |
| 20   | 3382012194  | Engine oil indicator, complete      | 1   |   |
| .21  | -           | Wiring harness                      | 1   |   |
| .22  | -           | Nut                                 | 1   |   |
| 23   | 0347012230  | Hose clamp                          | 2   |   |
| 24   | 3382011484  | Air intake hose                     | 1   |   |
| 25   | 3382011473  | Air hose connection                 | 1   |   |
| 26   | 4700379490  | Hose                                | 1   |   |
| 27   | 0261109910  | Nut, fine pitch, M12 x 1.25 mm      | 1   |   |
| 28   | 3382010862  | Centrifugal clutch                  | 1   |   |
| 29   | -           | Engine adapter                      | 1   |   |
| 30   | 4700384517  | Stud                                | 4   |   |
| 31   | 0261109955  | Nut, fine pitch, M10 x 1.25 mm      | 4   |   |
| 32   | 3382012181  | Engine, Honda GXR 120               | 1   |   |
| 33   | 0301232100  | Washer, 6.4 x 12 x 1.6 mm           | 3   |   |

#### Spare parts list Transmisson

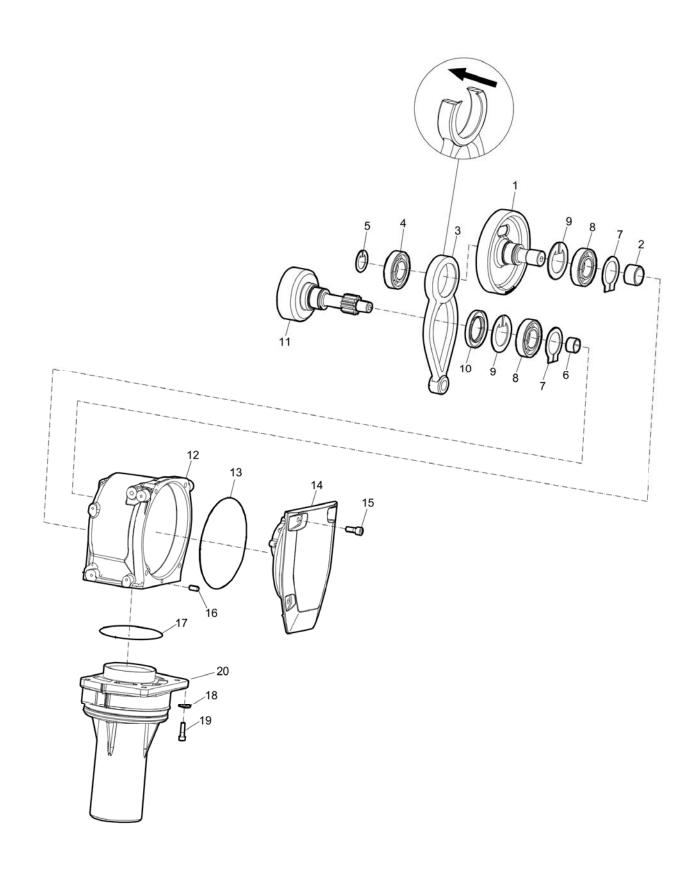


| Item | Part Number | Name                     | Qty | L |
|------|-------------|--------------------------|-----|---|
| 1    | 4700380906  | Gear wheel               | 1   |   |
| 2    | 4700904950  | Needle bearing           | 1   |   |
| 3    | 4700380920  | Connecting rod           | 1   |   |
| 4    | 4700111078  | Ball bearing             | 1   |   |
| 5    | 0335112700  | Retaining ring for shaft | 1   |   |
| 6    | 4700904949  | Needle bearing           | 1   |   |
| 7    | 0335113600  | Snap ring                | 2   |   |
| 8    | 4700903520  | Bearing                  | 2   |   |
| 9    | 4700151025  | Snap ring                | 2   |   |
| 10   | 4700904952  | Sealing                  | 1   |   |
| 11   | 4700381477  | Shaft                    | 1   |   |
| 12   | 3382011251  | Crankcase                | 1   |   |
| 13   | 4700160106  | O-ring                   | 1   |   |
| 14   | 3382011322  | Cover                    | 1   |   |
| 15   | 4700508096  | Screw                    | 4   |   |
| 16   | 4700628006  | Pin                      | 1   |   |
| 17   | 4700160035  | O-ring                   | 1   |   |
| 18   | 4700904230  | Steel plain washer       | 4   |   |
| 19   | 4700508053  | Screw                    | 4   |   |
| 20   | 3382012440  | Outer tube               | 1   |   |

### Spare parts list Spring unit

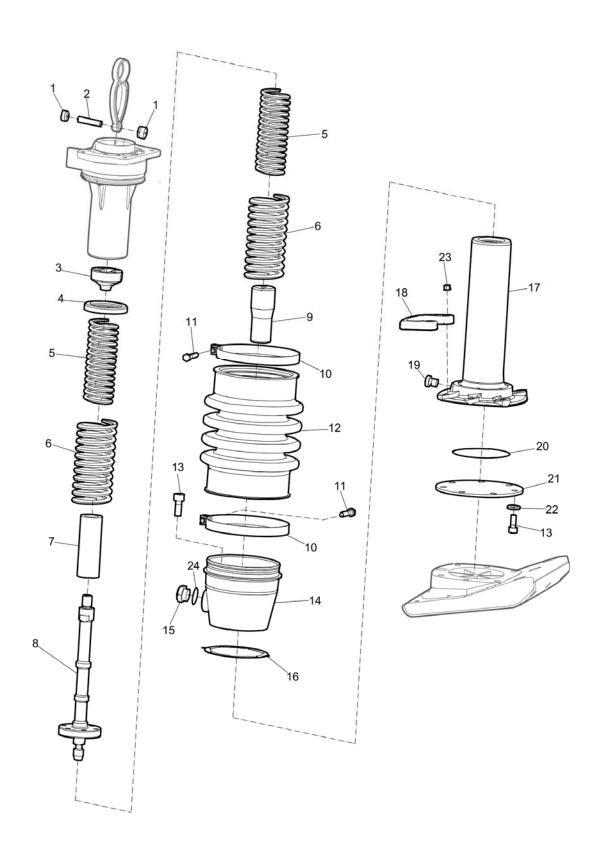

| Item | Part Number | Name                 | Qty | L |
|------|-------------|----------------------|-----|---|
| 1    | 4700381482  | Plug                 | 2   |   |
| 2    | 4700381479  | Piston bolt          | 1   |   |
| 3    | 4700381961  | Rod piston head      | 1   |   |
| 4    | 4700383681  | Lid                  | 1   |   |
| 5    | 4700380895  | Spring               | 2   |   |
| 6    | 4700380894  | Spring               | 2   |   |
| 7    | 4700380899  | Stop                 | 1   |   |
| 8    | 4700383668  | Rod piston           | 1   |   |
| 9    | 4700380902  | Stop                 | 1   |   |
| 10   | 4700283631  | Hose clamp           | 2   |   |
| 11   | 4700500023  | Screw M8-1,25x40 8,8 | 2   |   |
| 12   | 4812070541  | Bellows              | 1   |   |
| 13   | 4700508092  | Screw                | 12  |   |
| 14   | 4700388409  | Bellows support      | 1   |   |
| 15   | 4700791395  | Sight plug           | 1   |   |
| 16   | 4700383666  | Gasket               | 1   |   |
| 17   | 4700383669  | Inner tube           | 1   |   |
| 18   | 4700384416  | Handle               | 1   |   |
| 19   | 4700904951  | Plug                 | 1   |   |
| 20   | 4700160054  | O-ring               | 1   |   |
| 21   | 4700382369  | Lid                  | 1   |   |
| 22   | 4700162009  | Seal ring            | 6   |   |
| 23   | 0291112845  | Nut, M12, 10.9       | 2   |   |
| 24   | 4700791376  | Fiber washer         | 1   |   |


### Spare parts list Foot 230 mm (9 in.)

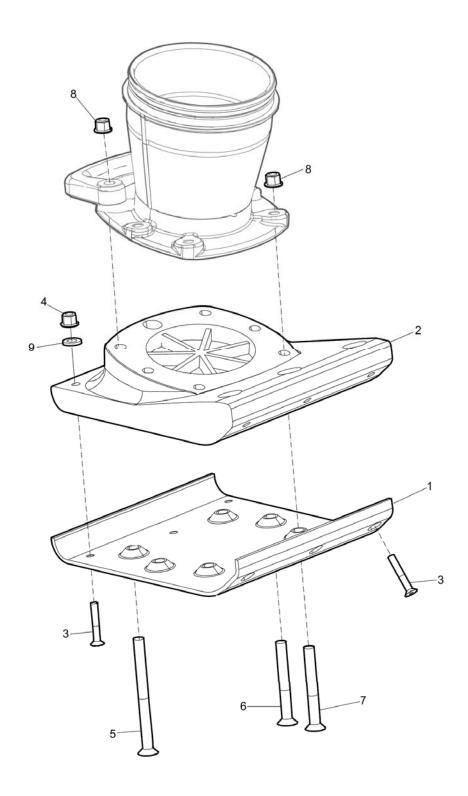

| Item | Part Number | Name                              | Qty | L |
|------|-------------|-----------------------------------|-----|---|
| 1    | 3382011486  | Ground plate, 230 mm, 9 in.       | 1   |   |
| 2    | 4700382688  | Foot                              | 1   |   |
| 3    | 0226991801  | Screw, M8 x 50 mm 8.8, DIN605     | 6   |   |
| 4    | 0291112819  | Lock nut, M8                      | 6   |   |
| 5    | 0226991804  | Screw, M12 x 150 mm, 10.9, DIN608 | 2   |   |
| 6    | 0226991803  | Screw, M12 x 110 mm, 10.9, DIN608 | 2   |   |
| 7    | 0226991802  | Screw, M12 x 100 mm, 10.9, DIN608 | 2   |   |
| 8    | 0291112845  | Nut, M12, 10.9                    | 6   |   |
| 9    | 4700904640  | Washer 8.4 x 16 x 1.5 mm          | 6   |   |


Spare parts list

### Spare parts list Foot, 280 mm, 11 in.

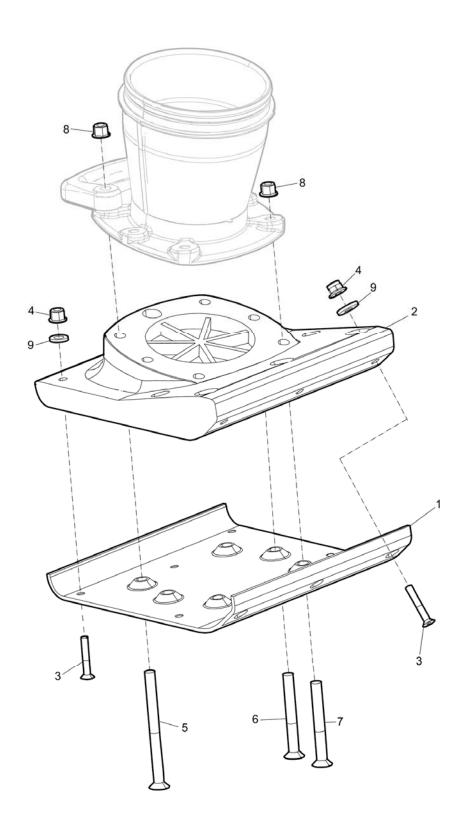

| Item | Part Number | Name                              | Qty | L |
|------|-------------|-----------------------------------|-----|---|
| 1    | 3382011358  | Ground plate                      | 1   |   |
| 2    | 4700382366  | Foot                              | 1   |   |
| 3    | 0226991801  | Screw, M8 x 50 mm 8.8, DIN605     | 8   |   |
| 4    | 0291112819  | Lock nut, M8                      | 8   |   |
| 5    | 0226991804  | Screw, M12 x 150 mm, 10.9, DIN608 | 2   |   |
| 6    | 0226991803  | Screw, M12 x 110 mm, 10.9, DIN608 | 2   |   |
| 7    | 0226991802  | Screw, M12 x 100 mm, 10.9, DIN608 | 2   |   |
| 8    | 0291112845  | Nut, M12, 10.9                    | 6   |   |
| 9    | 4700904640  | Washer 8.4 x 16 x 1.5 mm          | 8   |   |

#### Spare parts list Label

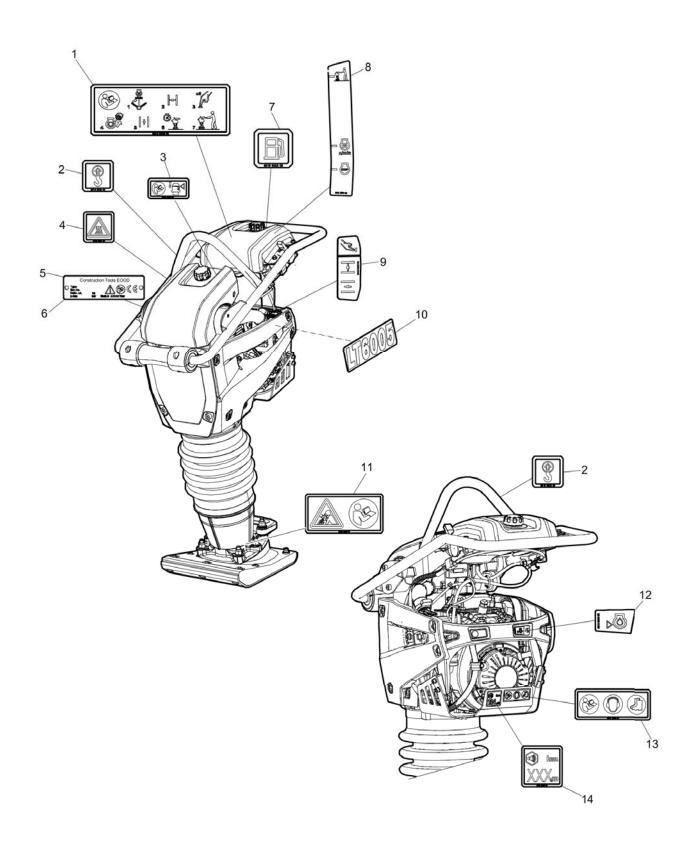

| Item | Part Number | Name  | Qty | L |
|------|-------------|---|-----|---|
| 1    | 8915002603  | Label, start instruction  | 1   |   |
| 2    | 8915002393  | Label, lifting point  | 2   |   |
| 3    | 8915002396  | Label. air filter indicator                                       | 1   |   |
| 4    | 8915002389  | Safety label, hot surfaces  | 1   |   |
| 5    | -           | Data plate  | 1   |   |
| 6    | -           | Rivet   | 2   |   |
| 8    | 8915002398  | Label, start instruction  | 1   |   |
| 9    | 8915002570  | Label, engine choke and primer pump                               | 1   |   |
| 10   | 3382011863  | Product label "LT 6005"   | 2   |   |
| 11   | 4700791088  | Safety label, compressed spring package                           | 1   |   |
| 12   | 8915002602  | Label, engine oil indicator                                       | 1   |   |
| 13   | 8912002387  | Safety label, read instructions, ear protection, and safety boots |     |   |
| 14   | -           | Sound power label   |     |   |

Kits One year service kit

Spare parts list

Kits Shock absorber repair kit

| Item | Part Number | Name                                | Qty | L |
|------|-------------|-------------------------------------|-----|---|
| 1    | 3382100315  | Shock absorber repair kit           | 1   |   |
| .2   | 3382011297  | Shock absober                       | 2   |   |
| .3   | 0211132303  | Screw, M8 x 20 mm                   | 4   |   |
| .4   | 0301233500  | Washer, 8.4 x 16 x 1.6 mm HB200 FZB | 4   |   |
| .5   | 0211132503  | Screw, M8 x 25 mm                   | 4   |   |

Spare parts list

Kits Transmission repair kit

| Item | Part Number | Name  | Qty | L |
|------|-------------|---|-----|---|
| 1    | 4812155283  | Repair kit, transmission                                | 1   |   |
| .2   | 4700904950  | Needle bearing  | 1   |   |
| .3   | 4700111078  | Ball bearing  | 1   |   |
| .4   | 4700150009  | Snap ring   | 1   |   |
| .5   | 4700904949  | Needle bearing  | 1   |   |
| .6   | 4700150014  | Snap ring   | 2   |   |
| .7   | 4700903520  | Bearing   | 2   |   |
| .8   | 4700151025  | Snap ring   | 2   |   |
| .9   | 4700904952  | Sealing   | 1   |   |
| 10   | -           | Nut, M12 x 1.25 mm A3K                                  | 1   |   |
| 11   | 4700160106  | O-ring  | 1   |   |
| 12   | -           | Screw, M10 x 25 mm 8.8 A3K                              | 4   |   |
| 13   | 4700160035  | O-ring  | 1   |   |
| 14   | -           | Washer, 10.5 x 22 x 2 mm, 0.41 x 0.87 x 0.08 in. 300 HV | 4   |   |
| 15   | -           | Screw, M10 x 35 mm 8.8 A3K                              | 4   |   |
| 16   | -           | Washer, 8.4 x 26 x 3 mm, 0.33 x 1.02 x 0.12 in.         | 1   |   |
| 17   | -           | Screw, M8 x 25 mm 8.8 A2K                               | 1   |   |

Kits Spring unit repair kit

| Item | Part Number | Name   | Qty | L |
|------|-------------|--|-----|---|
| 1    | 4812155284  | Repair kit, spring unit                              | 1   |   |
| .2   | 4700380895  | Spring   | 2   |   |
| .3   | 4700380894  | Spring   | 2   |   |
| .4   | 4700380899  | Stop   | 1   |   |
| .5   | 4700380902  | Stop   | 1   |   |
| 6    | -           | Screw, M8 x 20 mm 8.8 A2K                            | 6   |   |
| 7    | 4700383666  | Gasket   | 1   |   |
| 8    | 4700160054  | O-ring   | 1   |   |
| 9    | -           | Washer, 8.7 x 14 x 1 mm, 0.32 x 0.04 in. Type A      | 6   |   |
| 10   | -           | Fibre washer, 27 x 32 x 2 mm, 1.06 x 1.26 x 0.08 in. | 1   |   |


Kits Foot 230 mm, 9 in. repair kit

| Item | Part Number | Name                              | Qty | L |
|------|-------------|-----------------------------------|-----|---|
| 1    | 3382100316  | Foot 230 mm, 9 in. Repair kit     | 1   |   |
| .2   | 3382011486  | Ground plate, 230 mm, 9 in.       | 1   |   |
| .3   | 4700382688  | Foot                              | 1   |   |
| .4   | 0226991801  | Screw, M8 x 50 mm 8.8, DIN605     | 6   |   |
| .5   | 0291112819  | Lock nut, M8                      | 6   |   |
| .6   | 0226991804  | Screw, M12 x 150 mm, 10.9, DIN608 | 2   |   |
| .7   | 0226991803  | Screw, M12 x 110 mm, 10.9, DIN608 | 2   |   |
| .8   | 0226991802  | Screw, M12 x 100 mm, 10.9, DIN608 | 2   |   |
| .9   | 0291112845  | Nut, M12, 10.9                    | 6   |   |
| .10  | 4700904640  | Washer 8.4 x 16 x 1.5 mm          | 6   |   |

Kits Foot 280 mm, 11 in. repair kit

| Item | Part Number | Name                              | Qty | L |
|------|-------------|-----------------------------------|-----|---|
| 1    | 3382100317  | Foot 280 mm, 11 in. Repair kit    |     |   |
| .2   | 3382011358  | Ground plate                      |     |   |
| .3   | 4700382366  | Foot                              |     |   |
| .4   | 0226991801  | Screw, M8 x 50 mm 8.8, DIN605     |     |   |
| .5   | 0291112819  | Lock nut, M8                      |     |   |
| .6   | 0226991804  | Screw, M12 x 150 mm, 10.9, DIN608 |     |   |
| .7   | 0226991803  | Screw, M12 x 110 mm, 10.9, DIN608 |     |   |
| .8   | 0226991802  | Screw, M12 x 100 mm, 10.9, DIN608 |     |   |
| .9   | 0291112845  | Nut, M12, 10.9                    |     |   |
| .10  | 4700904640  | Washer 8.4 x 16 x 1.5 mm          |     |   |


Kits Air filter indictor and hour meter kit

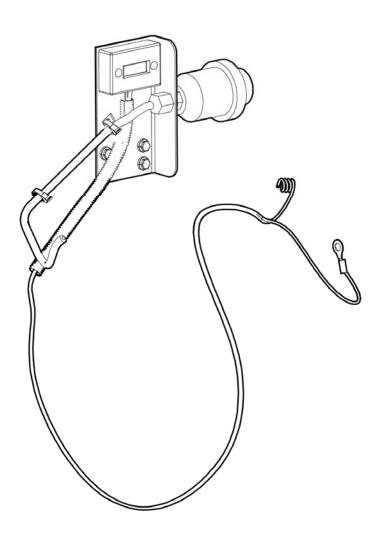

Spare parts list LT6005

|   | Item | Part Number | Name                         | Qty | L |
|---|------|-------------|------------------------------|-----|---|
| Ī | 1    | 3382011500  | Indicator and hour meter kit |     |   |

#### Kits Trolley

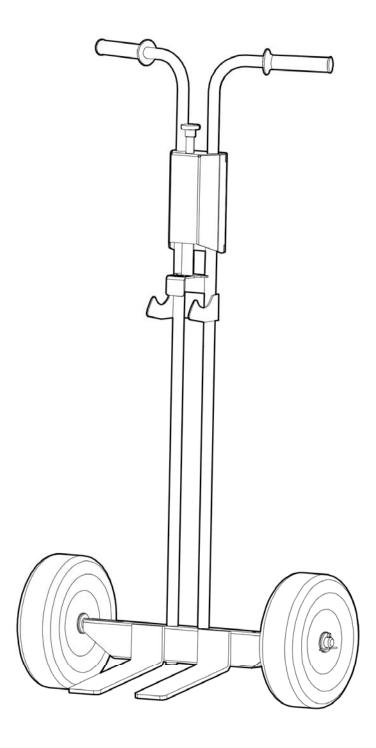

Spare parts list LT6005

| Item | Part Number | Name    | Qty | L |
|------|-------------|---------|-----|---|
| 1    | 3382000348  | Trolley | 1   |   |

Any unauthorized use or copying of the contents or any part thereof is prohibited. This applies in particular to trademarks, model denominations, part numbers, and drawings.

